

GETTING STARTED





IMPORTANT: Before operating or maintaining this unit, please read these instructions carefully, paying extra attention to the safety warnings and precautions. Use this unit correctly and with care. Failure to do so may cause damage and/or personal injury and will void the limited product warranty.

1

Connect the main cable's female adapter to the Vehicle Data Connector on the VCI unit, and tighten the captive screws.


A: for Wireless BT Diagnostic Interface

B: for J2534 ECU Programming Device

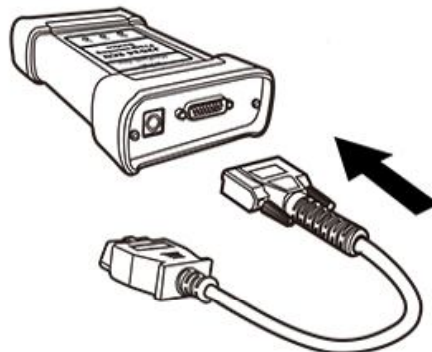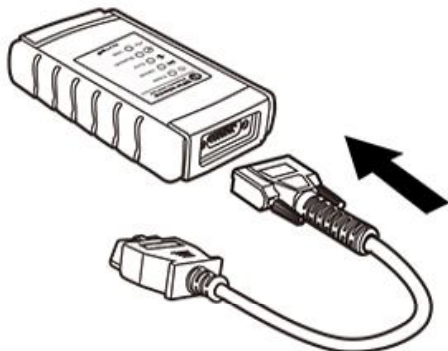


2

Connect the cable's 16-pin male adapter to the vehicle's DLC, which is generally located under the vehicle dash.

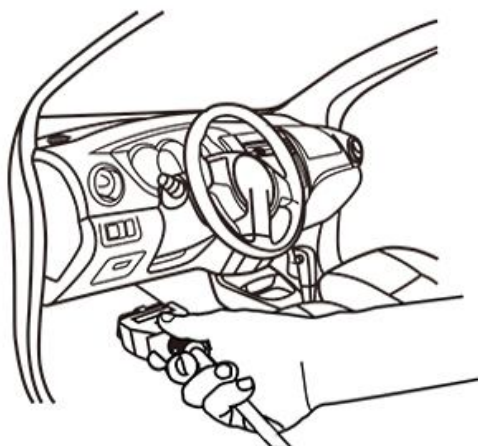

3

Power up the MaxiCOM Display Tablet, make sure the tablet has a charged battery or is connected to the DC power supply.

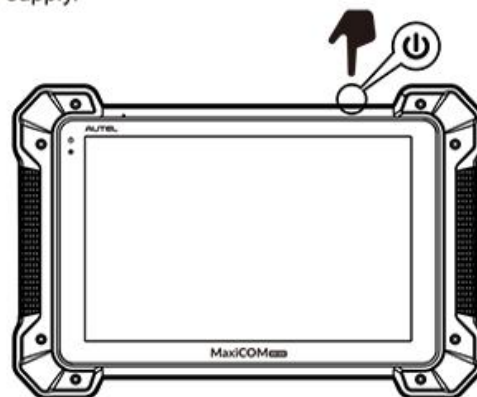

4

Pairing up the display tablet with the VCI device via wireless BT to establish a communication link.



NOTE: The MaxiCOM Display Tablet and the VCI device is configured to automatically synchronize with each other when you first use it, so there is no need to perform any pairing procedure.

5

When the VCI device is properly connected to the vehicle and the MaxiCOM Display Tablet, the VCI status button at the bottom bar on the display screen shows a green tick at the corner, indicating the platform is ready to start vehicle diagnosis.

